




# Hatsan SwingLoad Magazine Loading Instructions

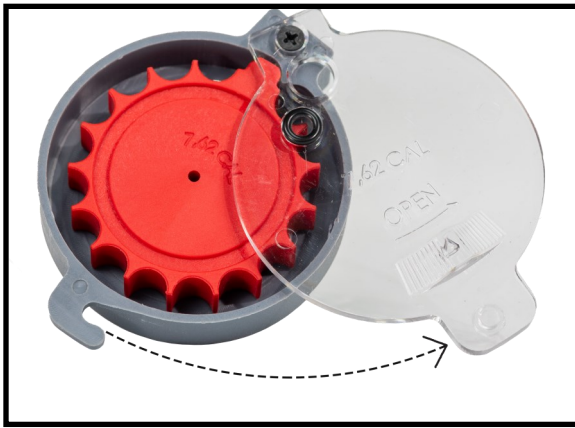


- 1) With the clear cover of the magazine facing you, swing the cover counter-clockwise to open it.

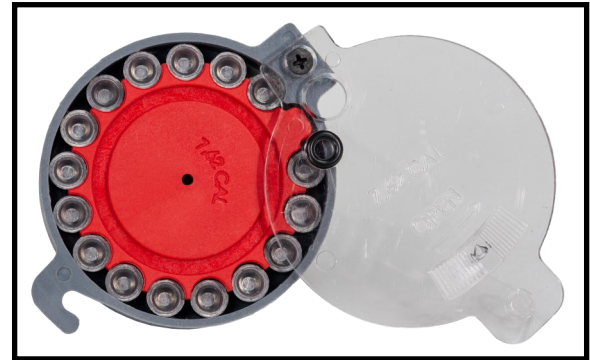


- 4) Load the remaining pellets into the other open locations in the magazine.

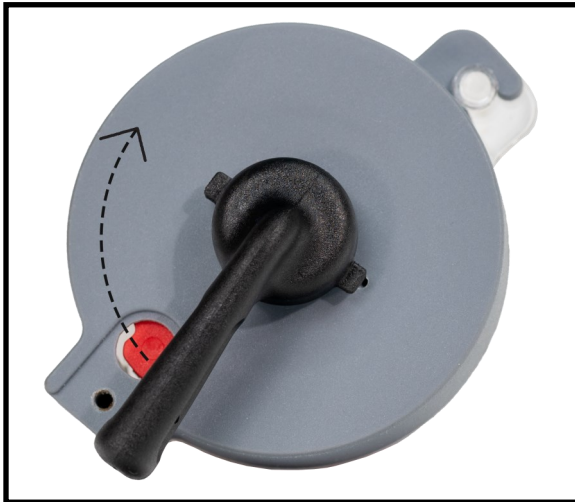

- 2) Place the winding tool onto the hexagonal hub on the back of the magazine and twist clock-wise until it stops turning.

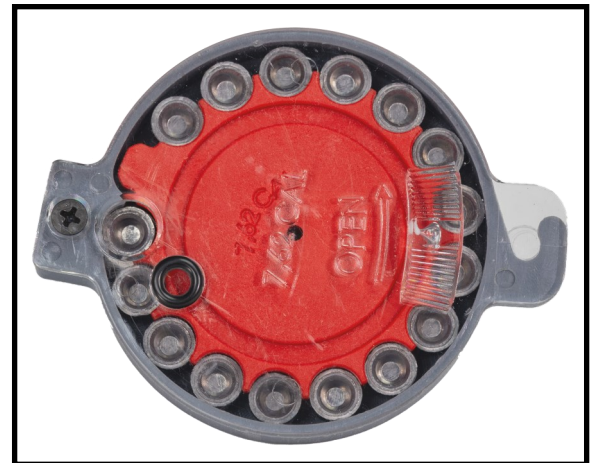

- 5) Return the magazine cover to the fully-closed position. Be sure that the protrusion on the cover seats fully into the slot of the magazine body.
- 6) The loaded magazine is now ready to be inserted into your air rifle!

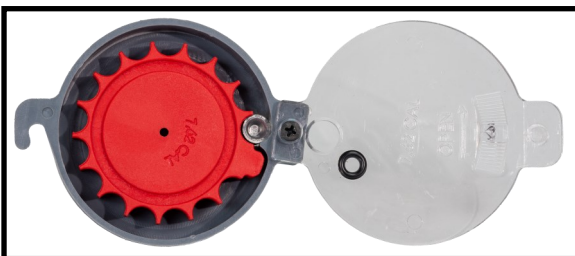

- 3) Load one pellet into the magazine, inline with the opening of the magazine body. This pellet will hold the magazine in the wound position.