

Steps to Replacing Trigger Assembly on Hatsan Blitz and Blitz 777


Follow all safety precautions for handling an air rifle (as shown in the product manual).

1. De-gas the air cylinder by loosening the bleed valve screw with a flat-head screwdriver (Blitz bleed screw is located directly next to the pressure gauge on the underside of the gun. Blitz 777 bleed screw is located on the left side of fill block, opposite the pressure gauge).

Blitz:



Blitz777:

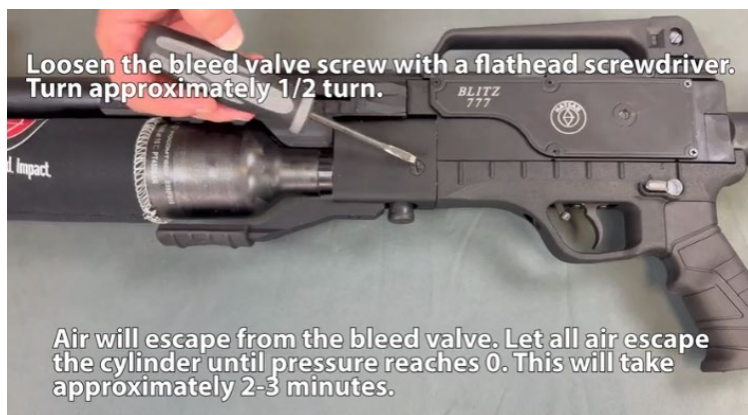

2. Using a 5mm allen tool, unscrew the stock/grip screw located just in front of the trigger guard on the underside of the gun. Then, pull the stock off of the receiver.

Blitz:



Blitz777:



3. Using a 2.5mm allen tool or similarly sized punch, push out the trigger housing pins (parts 3132 as shown in the parts diagram). A hammer or similar tool may be needed to assist in this step.



4. Note the orientation of the trigger assembly and pull the entire trigger assembly out of its slot in the air rifle.



5. Ensure that the placeholder pin (shown in Figure 01) is in position in your new trigger assembly. Placeholder pin should be flush with both sides of the trigger assembly housing.



6. Press the new trigger assembly into the slot in the air rifle in the same orientation noted in step 5.



7. Press the part 3132 trigger pins back into place through the receiver and trigger housing. These pins should be close to flush with the receiver when installed. A hammer or similar tool may be needed to assist in this step.



8. Press your stock back into place on the receiver (you may use the back of the receiver, the trigger, and the pressure gauge (Blitz only) as references for correct alignment) and retighten your stock/grip screw using a 5mm allen tool.

Blitz:



Blitz777:




9. Using a flat-head screwdriver, retighten the bleed valve screw from step 2.


Scan QR Code to View Trigger Assembly Replacement Video



Visit HatsanAirgunsUSA.com for more information.

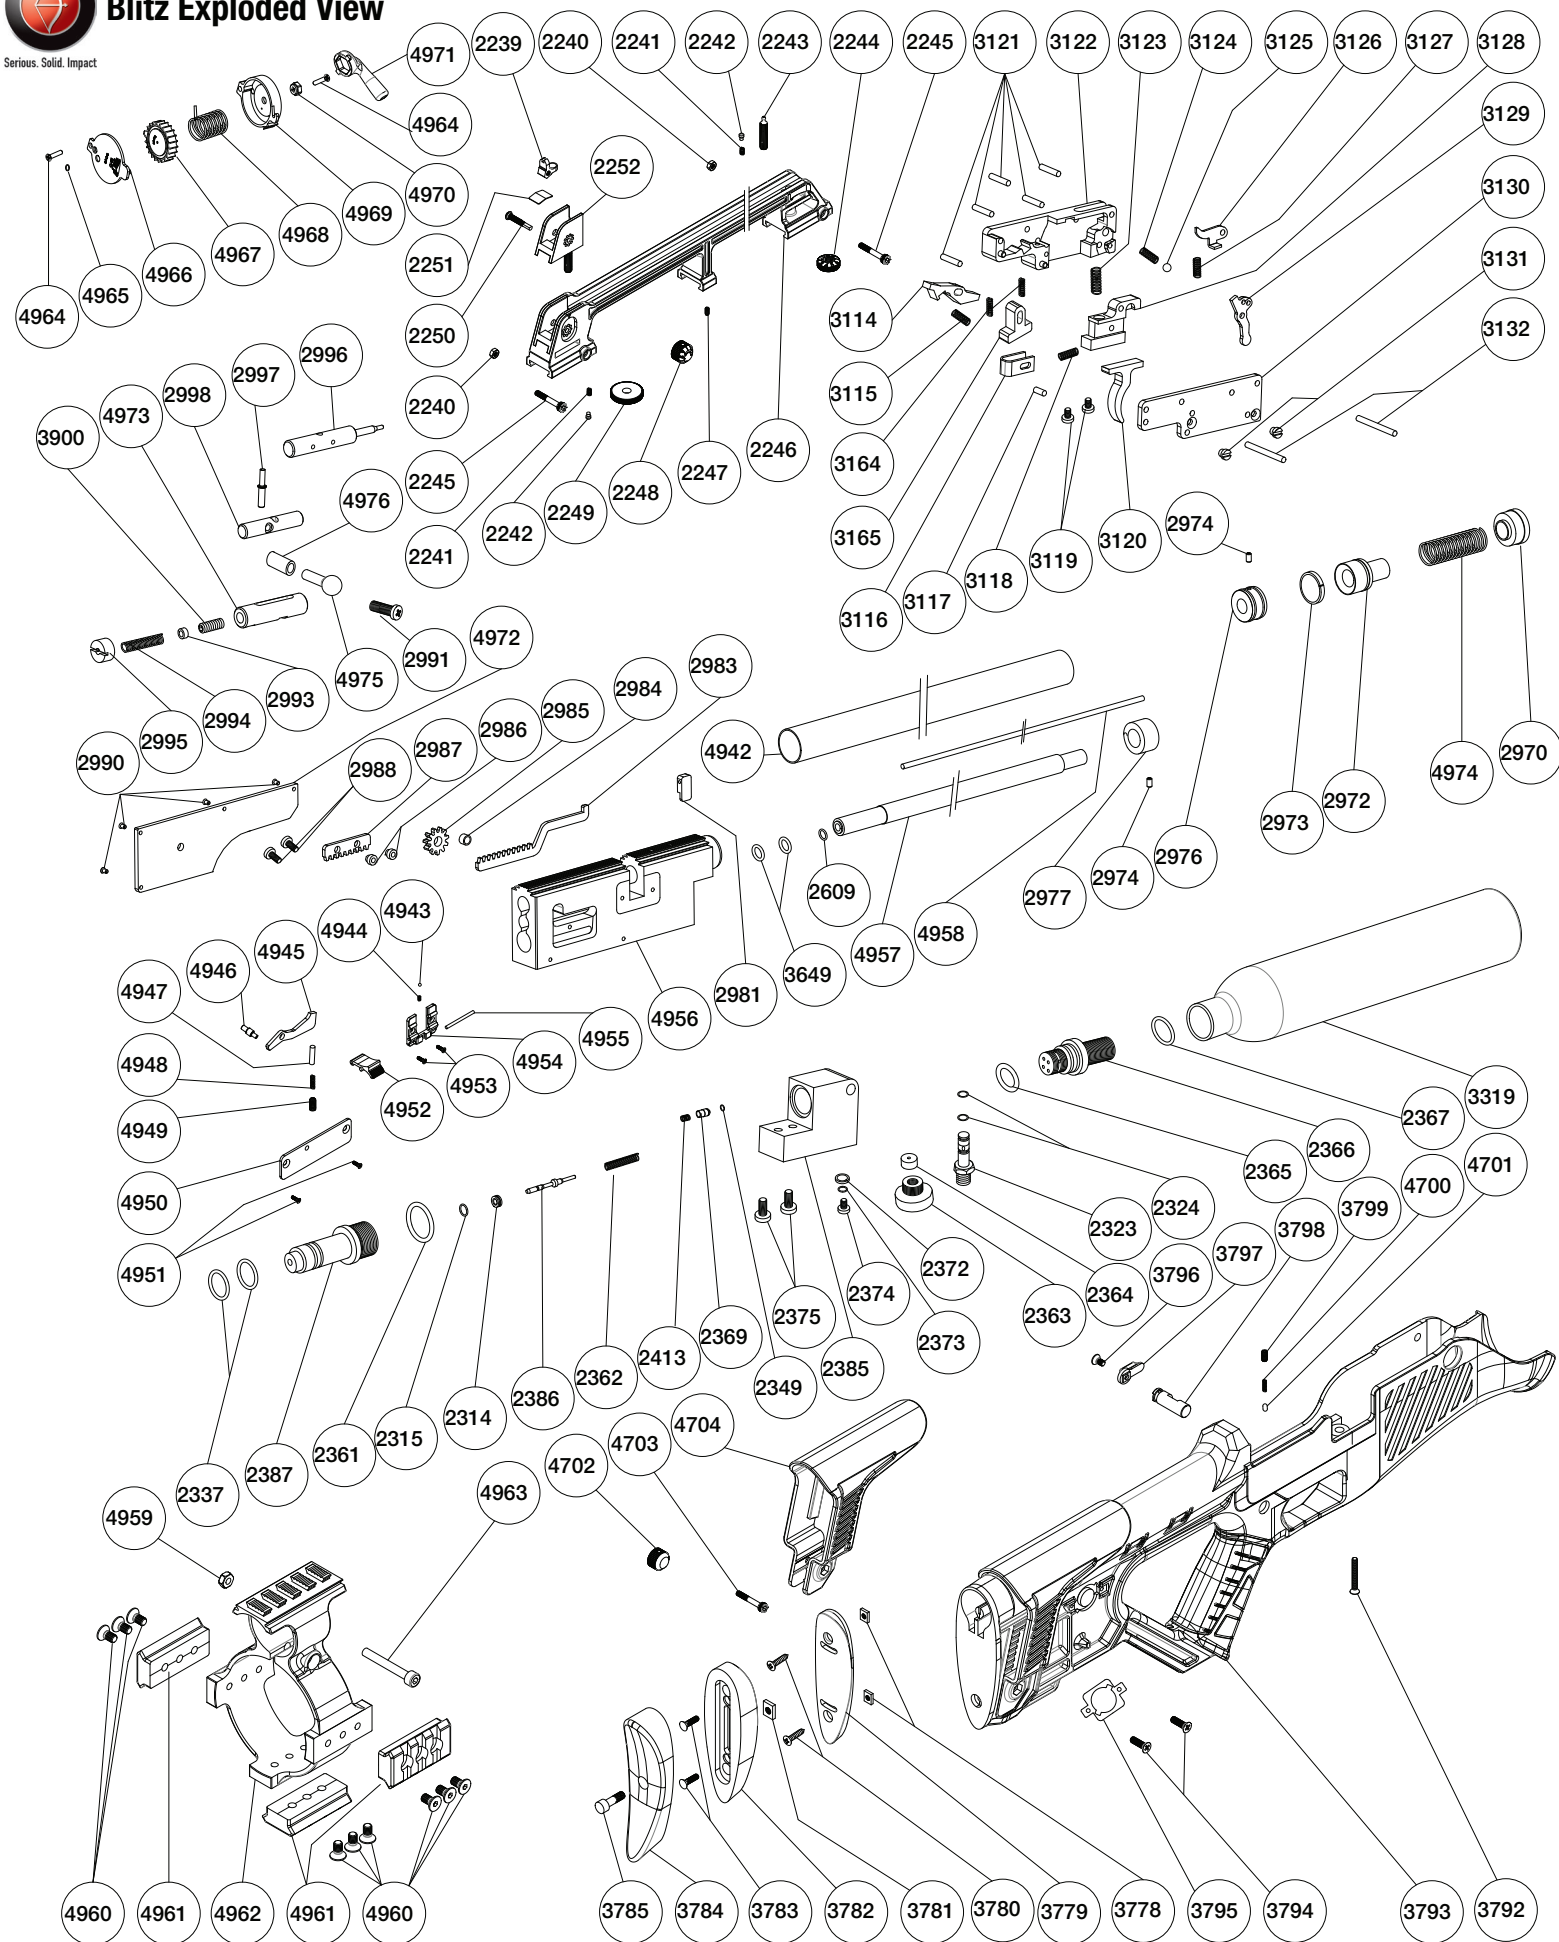 **Blitz Exploded View**

Blitz Trigger Group Exploded View

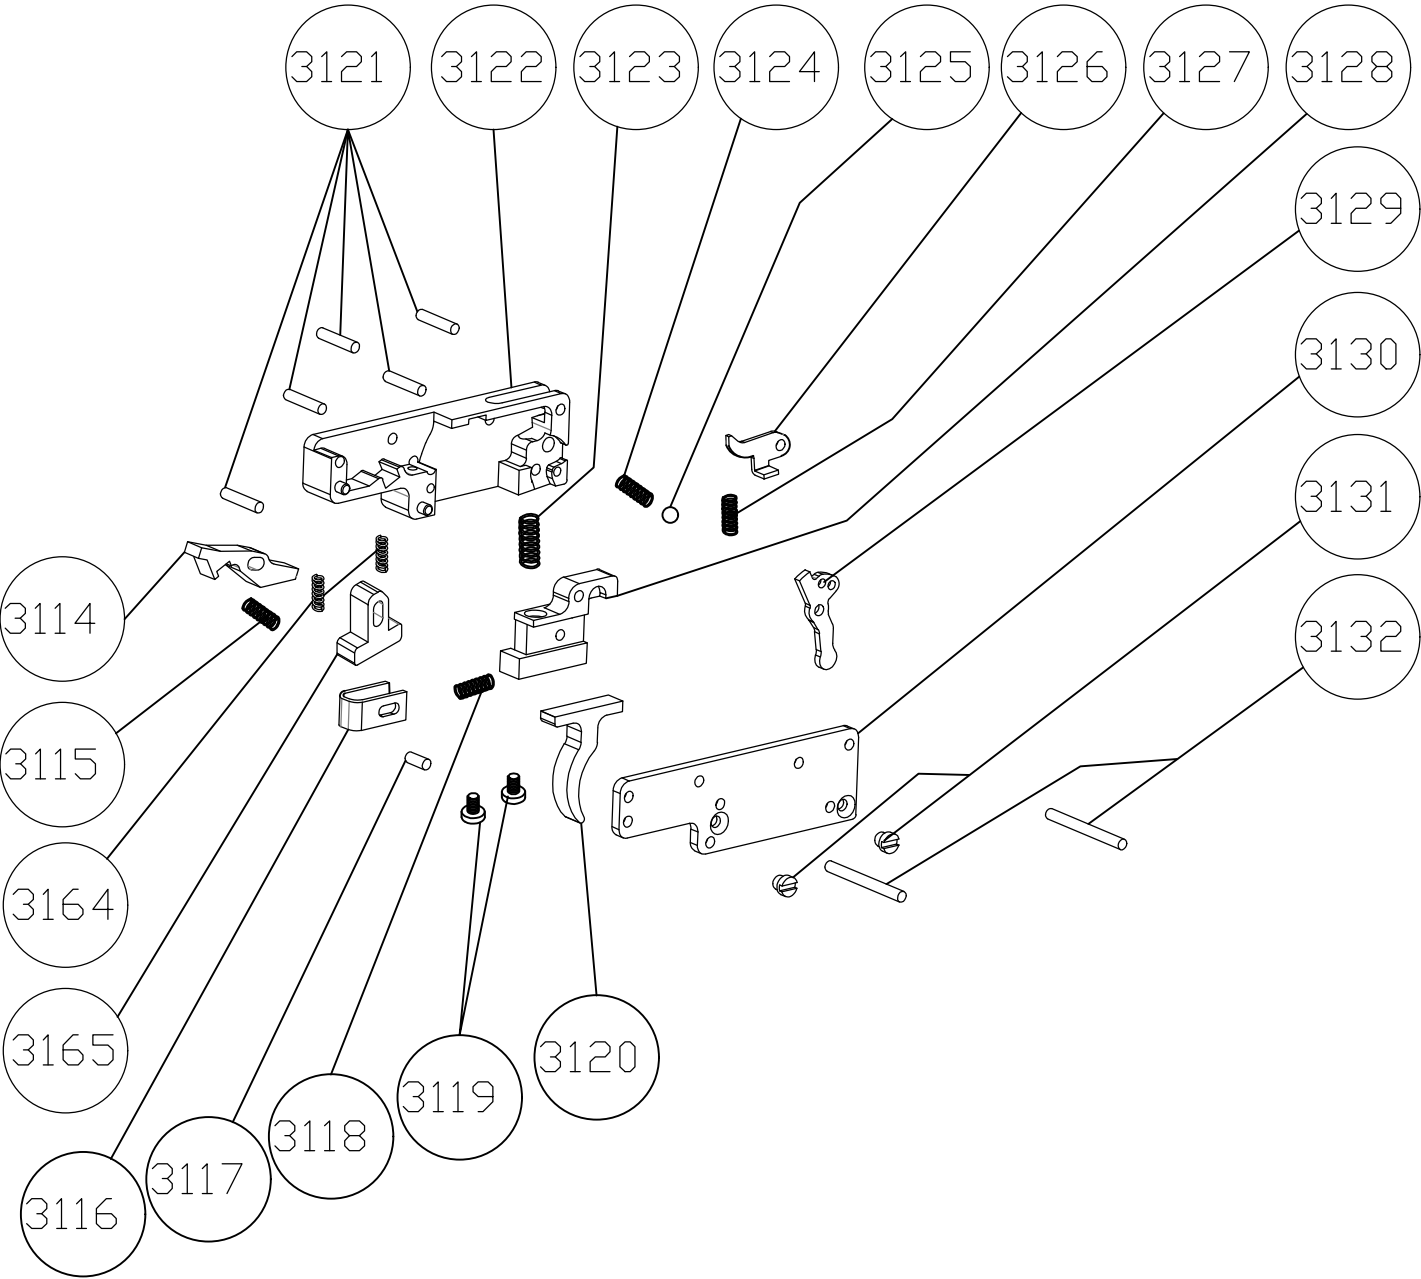


Blitz Trigger Group rt i t

TRIGGER GROUP


2150-14

SEAR	3114
SEAR SPRING	3115
TRIGGER MOVEMENT PART	3116
TRIGGER MOVEMENT PART PIN	3117
TRIGGER MOVEMENT PART SPRING	3118
TRIGGER SCREW	3119
TRIGGER	3120
TRIGGER PIN	3121
TRIGGER CASE	3122
TRIGGER SPRING	3123
SAFETY SPRING	3124
SAFETY BALL	3125
HAMMER SAFETY	3126
HAMMER SAFETY SPRING	3127
TRIGGER WEDGE	3128
SAFETY	3129
TRIGGER CASE COVER	3130
TRIGGER CASE SCREW	3131
TRIGGER CONNECTION PIN	3132
SEAR HOLDER SPRING	3164
SEAR HOLDER	3165

BLITZ 777

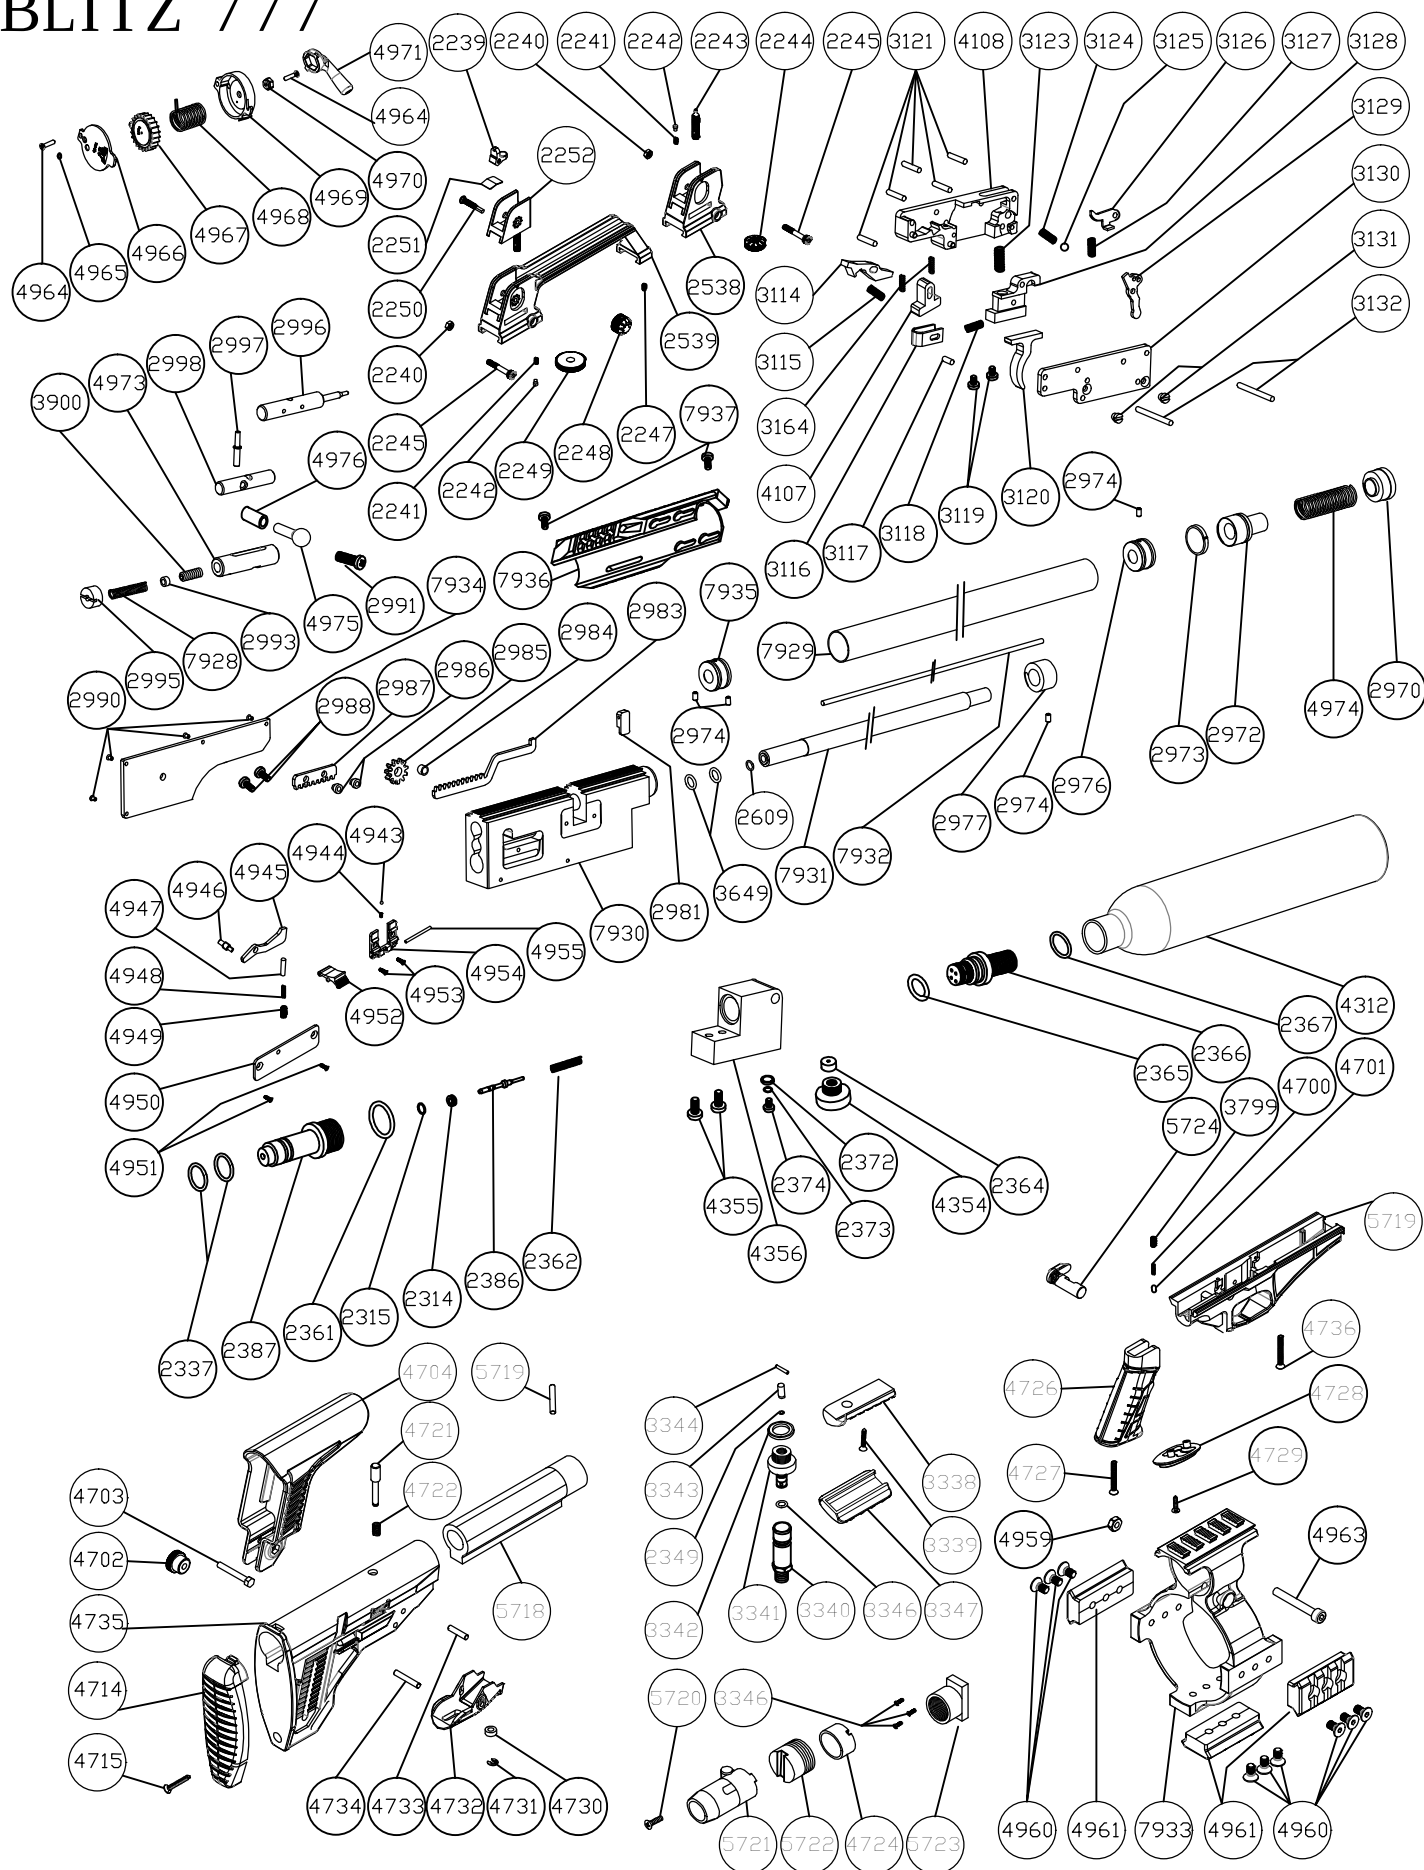

Blitz Trigger Group Exploded View

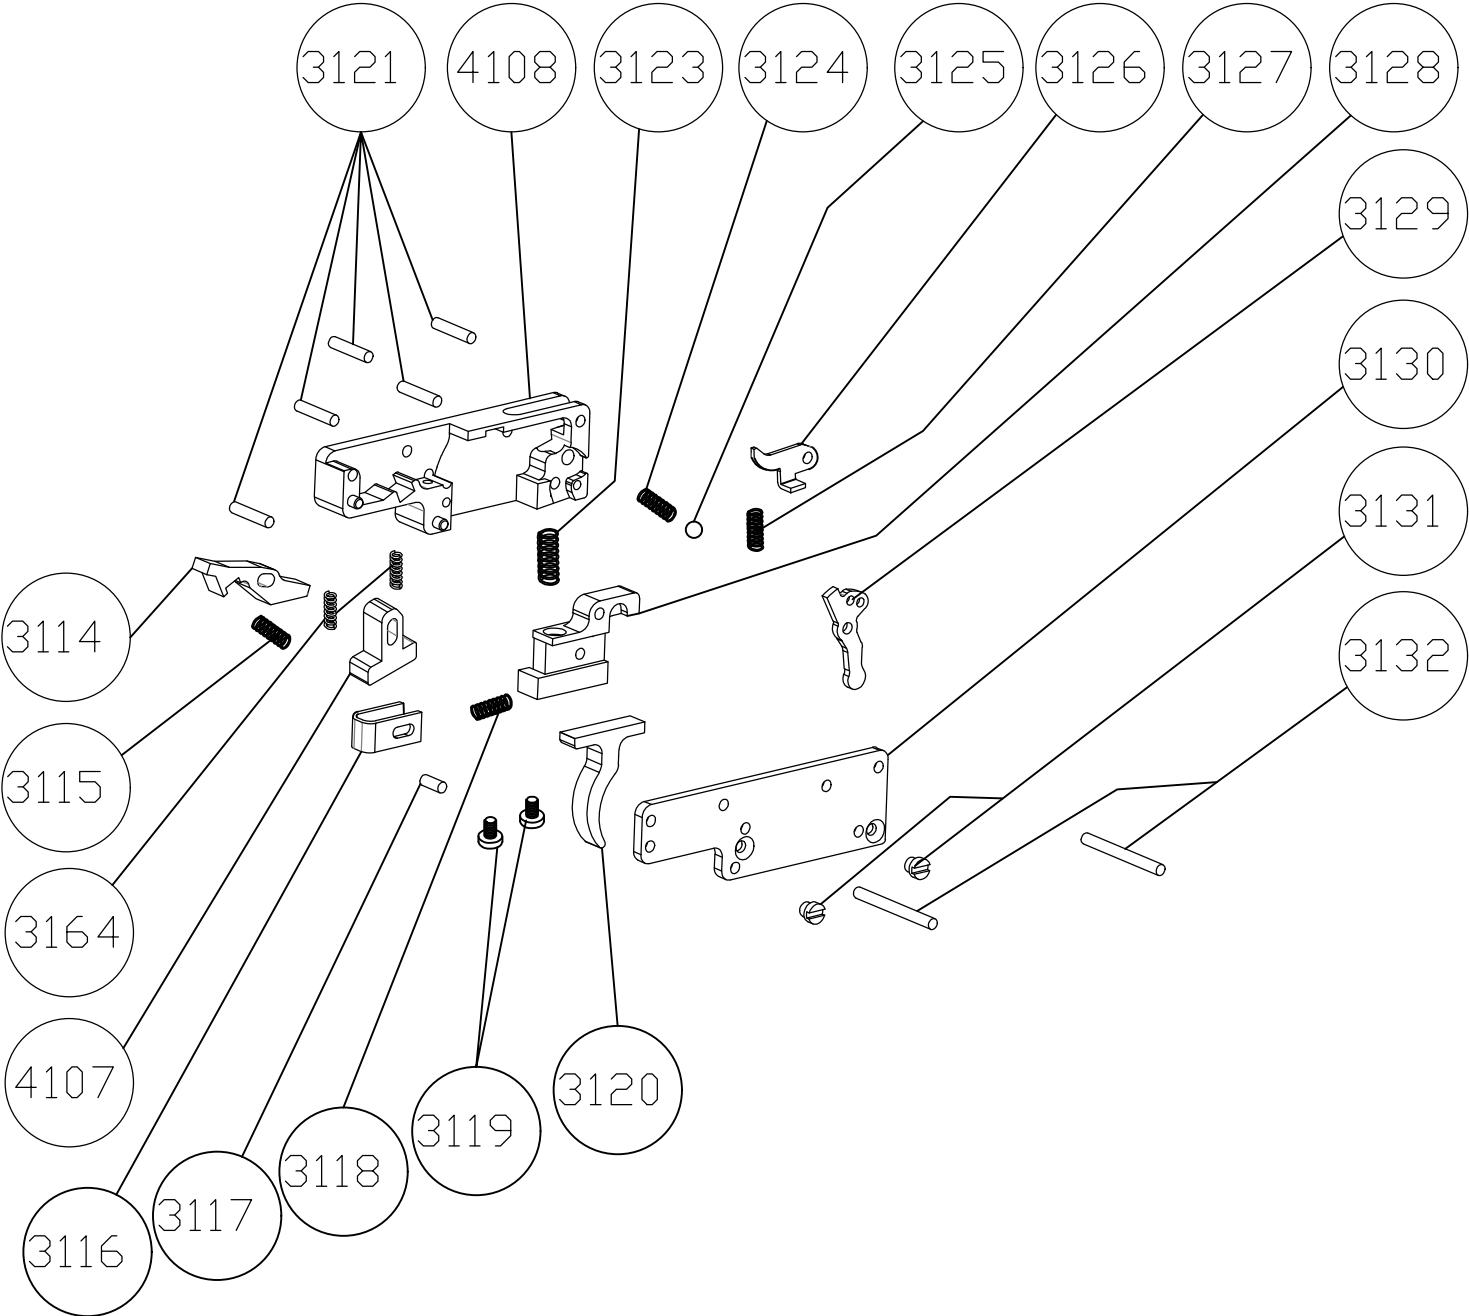

Blitz Trigger Group rt i t

TRIGGER GROUP	2150-23
SEAR	3114
SEAR SPRING	3115
TRIGGER MOVEMENT PART	3116
TRIGGER MOVEMENT PART PIN	3117
TRIGGER MOVEMENT PART SPRING	3118
TRIGGER SCREW	3119
TRIGGER	3120
TRIGGER PIN	3121
TRIGGER SPRING	3123
SAFETY SPRING	3124
SAFETY BALL	3125
HAMMER SAFETY	3126
HAMMER SAFETY SPRING	3127
TRIGGER WEDGE	3128
SAFETY	3129
TRIGGER CASE COVER	3130
TRIGGER CASE SCREW	3131
TRIGGER CONNECTION PIN	3132
SEAR HOLDER SPRING	3164
SEAR HOLDER	4107
TRIGGER CASE	4108